

Thank you!

Thank you for purchasing this DV520 Digital mobile radio by DELTA. This product is designed and developed according to international standards.

Our products are tested using strict and rigorous test procedures with advanced test instruments and equipment to internationally recognized standards.

This manual should be read to ensure that the user understands the operation of the DV520. Please read the Safety information Manual before use.

Safety Instructions

Please observe the following safety tips to prevent fire, accidents, personal injury or equipment damage.

Do not modify the radio or its changer in any way. Do not expose the radio to direct sunlight for extended periods of time, leave near heaters or other heat sources.

Do not store or use unprotected radios for prolonged periods in areas of high dust or excessive moisture.

Users may experience signal interference if the unit is used near devices such as TV or electric generators.

If the units emits smoke or you notice a strange smell, immediately turn off the power, and send it to the closest repair station.

The radios are small but contain high power components. It is not uncommon to notice slight warming of the handset. This is normal and the unit may be continued to be used.

 
If there is any problem with the radio, please contact DELTA or your local distributor.

Unpacking and Device Check

1 Main body	5 Fuse
2 Hand microphone	6 Mounting bracket
3 Fixed mount and screws for hand microphone	7 Instruction manual
4 Power line	8 GPS Antenna(optional part)


Product External View

Front panel

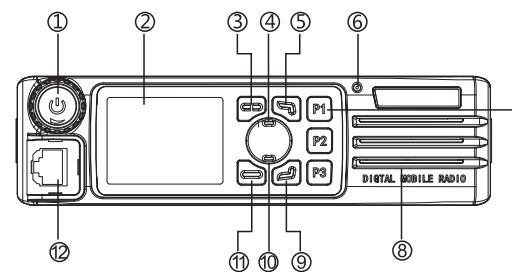


NO.	Part Name	NO.	Part Name
1	Switch/volume knob	7	Programmable button
2	LCD Display	8	speaker
3	return key	9	Call key
4	Up key	10	Down key
5	Home key	11	Menu key
6	Receive and transmit indicator	12	Hand microphone interface

 Hand microphone interface description

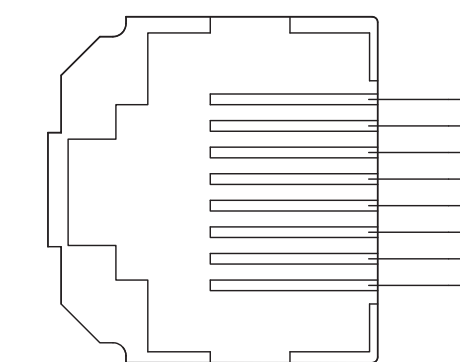


Pin number	Pin definition	Pin description	Remark
1	3.3V	+3.3V output	Frequency writer power supply
2	VCC	+12V output	Hand microphone power supply
3	GND	Ground wire	
4	PTT/USB+	send data	Mobile radio transmission / reading and writing frequency, burning program
5	ME	MIC (microphone) connected to the ground wire	
6	MIC	MIC(microphone) signal input	
7	USB-	Receive data	Hand microphone signal input, read and write frequency, burning program
8	DKEY	Digital keypad command input	hand microphone with digital keyboard is effective

 Rear panel

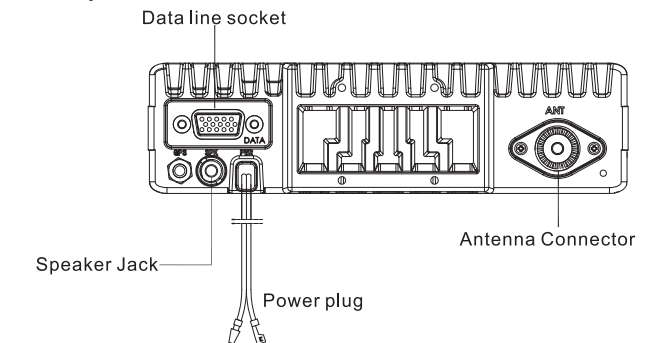

Data socket interface description

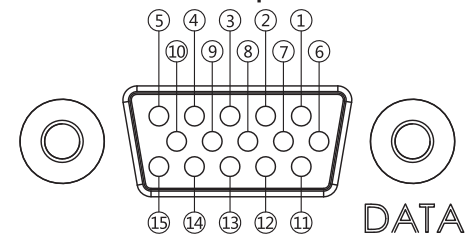 

NO.	Part Name	NO.	Part Name
1	EXIT AF-IN	9	MIC_OUT
2	COMK1	10	Exit RX AF
3	GND	11	DC_SW
4	+12V	12	COMK3
5	SPK-out	13	USB_D+
6	COMK2	14	USB_D-
7	EXIT MOD1	15	GND
8	EXIT MOD2		

Programmable key function

In order to improve the convenience of operation, the programmable keys of this unit are P1, P2, P3, call key, and the user can be programmed as a shortcut key (see the table below).

NO.	Shortcut name	use
1	Power switching	Quickly adjust the transmit power
2	Steady state monitoring [simulation]	
3	Transient monitoring [analog]	Adjust signal reception matching condition
4	Steady state canceling squelch [analog]	Always turn on the speaker whether or not there is a carrier
5	Transient canceling squelch [analog]	
6	Regional up	Quick selection area
7	Regional down	
8	scanning	Listen to communication activity on other channels
9	Off-network	Direct communication with other terminals
10	One-touch call 1-4 (DMR)	Call the shortcut key, press the one-touch call to enter the quick call mode, and then press the PTT to send the corresponding call assist service function.
11	Broadcast local ID[number]	Set the broadcast local ID
12	Broadcast channel number	Press to broadcast the current channel number
13	Broadcast power	Set to press the local power
14	Broadcast battery power	Set to press the local battery power
15	Broadcast channel type	Set the current channel type by pressing the broadcast

Note: Long press and short press of the same button can realize different functions, which are set by the user.

Installation

Before installing this radio, please read the following installation precautions carefully.

 
Precautions

- This machine can only be in 13.6V ± 15 % The negative pole is grounded under the power system. Be sure to check the polarity and voltage of the power supply before installing the unit.
- Before installing the unit, be sure to check the length of the screw protruding from the surface of the radio. Care should be taken when drilling the mounting holes so that the wiring or parts of the car must not be damaged.
- Connect the antenna and power cord to the radio before loading the radio into the mounting bracket.
- Please use the mounting bracket provided by the European standard to ensure that the vehicle is not easy to loosen in an accident. If the radio is not fully fixed, it may cause physical injury to the passenger.
- Install the radio on a location that is convenient for front panel operation.
- There should be enough space at the rear of the radio to make wiring.
- When replacing the fuse of the DC power cord, be sure to use a fuse of the same specification and do not replace it with a fuse with a higher fuse current.

Installation Kit


Electric drill, Phillips screwdriver, Hexagon socket

Preparation Steps

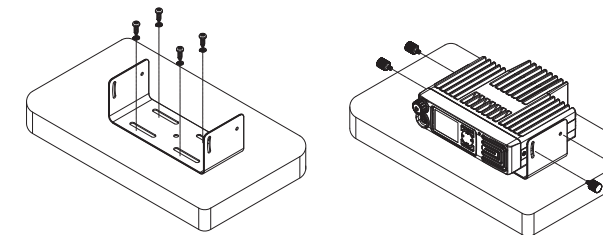

Bracket installation instructions

 - Install the u-bracket to the desired position
- Put the platform on the u-frame and secure it with screws.

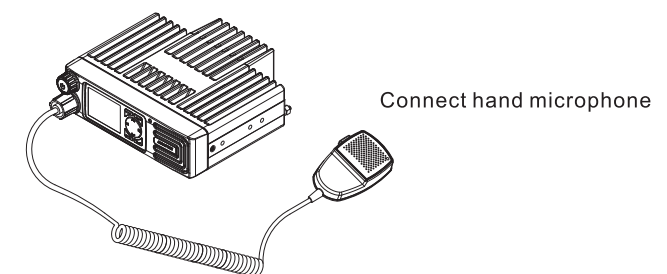

Status indication

LCD icon

Icon name	Icon display	status description
Emergency alarm icon		The Radio is in an emergency alarm state or receives an emergency alarm
Battery level icon		The more the number of bars, the more battery power
Launch indicator icon		The Radio is in the launch state
Signal indicator icon		The Radio has a receiving signal
Transmit power icon		Current channel power is low power
Squelch icon		Speaker turned on
Monitor icon		Monitoring function is turned on
Scan icon		The radio is in the scanning state
Lock button icon		Keyboard is locked
Off-line icon		Off-line function is turned on [some machines do not have this function]
Signaling icon	CT	Transmit or receive sub-audio
	DN	Set to transmit or receive positive sub-digital
Signaling icon	DI	Set to transmit or receive anti-sound digital
	CT	Already set to transmit or receive analog sub-audio
	DN	Already set to transmit or receive positive sub-digital
	DI	Already set to transmit or receive anti-sound digital

LED indicator

The front panel LED indicator allows the user to determine the radio state.

Indicator status	Radio status
Red LED is always on	Launching
Red LED flashing	1. Low voltage alarm, 2.USB upload data (When there is no USB upload data)
Green LED is always on	Receiving
Green LED flashes	Scanning
Orange LED is always on	Start monitoring

Basic operation

Power on and off

Press the power button and hear a beep, the green light will light up, the car will turn on, and then press the power button to turn off the car.

volume Control

Rotate the [Power/Volume] knob to adjust the volume, clockwise to increase the volume, and counterclockwise to decrease the volume.

Switching channels

The user can press the up and down keys to switch channels. The upper right corner of the LCD displays the alias of the current channel (CH:X), where X represents the channel number.

Zone Selection

A zone is a channel group, that is, you can include channels with the same attributes in one zone, so that you can effectively manage existing channels. The unit supports 100 zones, each zone containing up to 32 channels. There are two ways to select a region:

- Select through menu
After entering the "Area" menu, press the [Up] / [Down] key to select the desired area, and then press the [Enter] key to switch to the selected area.
- Select by programming button
Press the programmed [Zone Up] or [Zone Down] button to switch to the desired area.

Remarks: You can enter the designated area and channel after booting through the dealer settings. If not specified, enter the area and channel where the last shutdown occurred.

Call and reception

In order to ensure the best receiving volume of the receiver's intercom, please keep the microphone about 2.5 to the mouth when launching 5 cm.

Call

Initiate a call

You can initiate a call in the following ways.

- Make a call to a preset contact
In the standby interface, press and hold [PTT] to initiate a call to the preset caller on the current digital channel.
Remarks: You can preset a contact for each digital channel, which can be a caller or a group call.
Or call the contact all the time.
- Initiate a call through the Contact List or Call Log
1 Select "Contacts- > Contact List" or select "Call History" to enter the list of dialed / received / missed calls;
2 Use the [Up] / [Down] keys to select the caller you want to call;
3 Hold down [PTT] to initiate a call.
- Initiate a call by manual dialing
1 Select "Contacts- > Manual Dialing" to enter the dialing interface.
2 Enter the number of the call you want to call through the handheld microphone with keyboard;
3 Hold down [PTT] to initiate a call.

- Receive and reply to a call
After receiving a call, press [PTT] for a preset time to send a callback. If the callback is not made, the missed call alert icon is displayed. To remind you.

Group call

Initiate group call

You can initiate a group call in the following ways.

- Make a call to a preset contact
In the standby interface, press and hold [PTT] to initiate a group call to the group call contact preset on the current digital channel.
- Initiate a call through the Contact List
1 Select "Contact -> Contact List";
2 Use the [Up] or [Down] keys to select the group call contact you want to call;

Thank you!

Thank you for purchasing this DV520 Digital mobile radio by DELTA. This product is designed and developed according to international standards.

Our products are tested using strict and rigorous test procedures with advanced test instruments and equipment to internationally recognized standards.

This manual should be read to ensure that the user understands the operation of the DV520. Please read the Safety information Manual before use.

Safety Instructions

Please observe the following safety tips to prevent fire, accidents, personal injury or equipment damage.

Do not modify the radio or its charger in any way. Do not expose the radio to direct sunlight for extended periods of time, leave near heaters or other heat sources.

Do not store or use unprotected radios for prolonged periods in areas of high dust or excessive moisture.

Users may experience signal interference if the unit is used near devices such as TV or electric generators.

If the units emits smoke or you notice a strange smell, immediately turn off the power, and send it to the closest repair station.

The radios are small but contain high power components. It is not uncommon to notice slight warming of the handset. This is normal and the unit may be continued to be used.


If there is any problem with the radio, please contact DELTA or your local distributor.

Unpacking and Device Check

1 Main body	5 Fuse
2 Hand microphone	6 Mounting bracket
3 Fixed mount and screws for hand microphone	7 Instruction manual
4 Power line	8 GPS Antenna(optional part)


Product External View

 Front panel

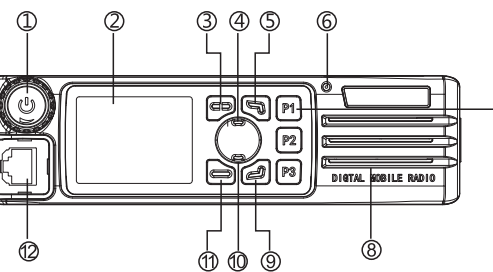


NO.	Part Name	NO.	Part Name
1	Switch/volume knob	7	Programmable button
2	LCD Display	8	speaker
3	return key	9	Call key
4	Up key	10	Down key
5	Home key	11	Menu key
6	Receive and transmit indicator	12	Hand microphone interface

 Hand microphone interface description

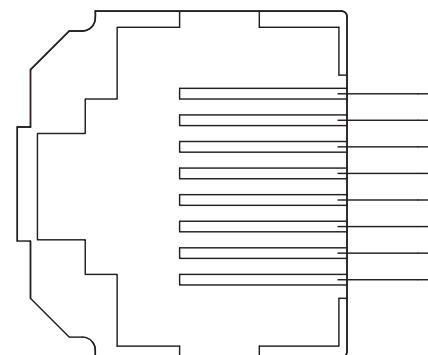


Pin number	Pin definition	Pin description	Remark
1	3.3V	+3.3V output	Frequency writer power supply
2	VCC	+12V output	Hand microphone power supply
3	GND	Ground wire	
4	PTT/USB+	send data	Mobile radio transmission / reading and writing frequency, burning program
5	ME	MIC (microphone) connected to the ground wire	
6	MIC	MIC(microphone) signal input	
7	USB-	Receive data	Hand microphone signal input, read and write frequency, burning program
8	DKEY	Digital keypad command input	hand microphone with digital keyboard is effective

 Rear panel

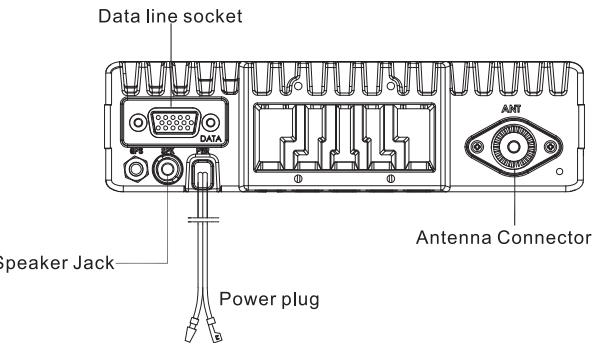

Data socket interface description

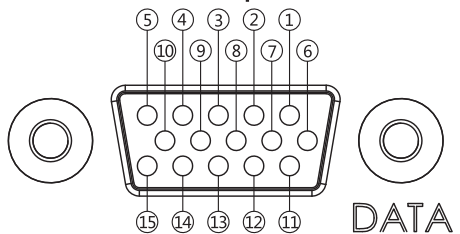 

NO.	Part Name	NO.	Part Name
1	EXIT AF-IN	9	MIC_OUT
2	COMK1	10	Exit RX AF
3	GND	11	DC_SW
4	+12V	12	COMK3
5	SPK-out	13	USB_D+
6	COMK2	14	USB_D-
7	EXIT MOD1	15	GND
8	EXIT MOD2		

Programmable key function

In order to improve the convenience of operation, the programmable keys of this unit are P1, P2 ,P3, call key , and the user can be programmed as a shortcut key (see the table below).

NO.	Shortcut name	use
1	Power switching	Quickly adjust the transmit power
2	Steady state monitoring [simulation]	
3	Transient monitoring [analog]	Adjust signal reception matching condition
4	Steady state canceling squelch [analog]	Always turn on the speaker whether or not there is a carrier
5	Transient canceling squelch [analog]	
6	Regional up	Quick selection area
7	Regional down	
8	scanning	Listen to communication activity on other channels
9	Off-network	Direct communication with other terminals
10	One-touch call 1-4 (DMR)	Call the shortcut key, press the one-touch call to enter the quick call mode , and then press the PTT to send the corresponding call assist service function.
11	Broadcast local ID[number]	Set the broadcast local ID
12	Broadcast channel number	Press to broadcast the current channel number
13	Broadcast power	Set to press the local power
14	Broadcast battery power	Set to press the local battery power
15	Broadcast channel type	Set the current channel type by pressing the broadcast

Note: Long press and short press of the same button can realize different functions, which are set by the user.

Installation

Before installing this radio, please read the following installation precautions carefully.

 
Precautions

- This machine can only be in 13.6V ± 15 % The negative pole is grounded under the power system. Be sure to check the polarity and voltage of the power supply before installing the unit.
- Before installing the unit, be sure to check the length of the screw protruding from the surface of the radio. Care should be taken when drilling the mounting holes so that the wiring or parts of the car must not be damaged.
- Connect the antenna and power cord to the radio before loading the radio into the mounting bracket.
- Please use the mounting bracket provided by the European standard to ensure that the vehicle is not easy to loosen in an accident. If the radio is not fully fixed, it may cause physical injury to the passenger.
- Install the radio on a location that is convenient for front panel operation.
- There should be enough space at the rear of the radio to make wiring.
- When replacing the fuse of the DC power cord, be sure to use a fuse of the same specification and do not replace it with a fuse with a higher fuse current.

Installation Kit


Electric drill, Phillips screwdriver, Hexagon socket

Preparation Steps

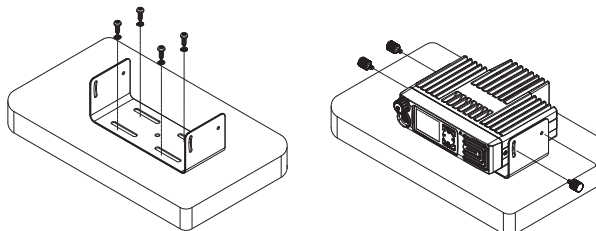

Bracket installation instructions

 1. Install the u-bracket to the desired position
2. Put the platform on the u-frame and secure it with screws.

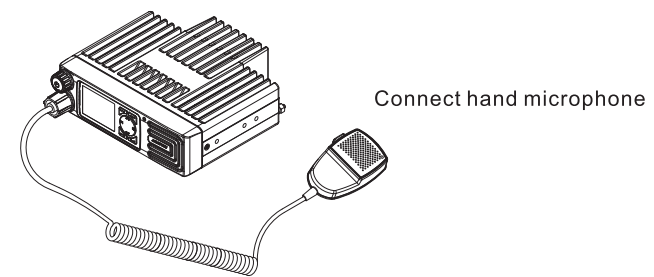

Status indication

LCD icon

Icon name	Icon display	status description
Emergency alarm icon		The Radio is in an emergency alarm state or receives an emergency alarm
Battery level icon		The more the number of bars, the more battery power
Launch indicator icon		The Radio is in the launch state
Signal indicator icon		The Radio has a receiving signal
Transmit power icon		Current channel power is low power
Squelch icon		Speaker turned on
Monitor icon		Monitoring function is turned on
Scan icon		The radio is in the scanning state
Lock button icon		Keyboard is locked
Off-line icon		Off-line function is turned on [some machines do not have this function]
Signaling icon	CT	Transmit or receive sub-audio
	DN	Set to transmit or receive positive sub-digital
	DI	Set to transmit or receive anti-sound digital
Signaling icon	CT	Already set to transmit or receive analog sub-audio
	DN	Already set to transmit or receive positive sub-digital
	DI	Already set to transmit or receive anti-sound digital

LED indicator

The front panel LED indicator allows the user to determine the radio state.

Indicator status	Radio status
Red LED is always on	Launching
Red LED flashing	1. Low voltage alarm, 2.USB upload data (When there is no USB upload data)
Green LED is always on	Receiving
Green LED flashes	Scanning
Orange LED is always on	Start monitoring

Basic operation

Power on and off

Press the power button and hear a beep, the green light will light up, the car will turn on, and then press the power button to turn off the car.

Volume Control

Rotate the [Power/Volume] knob to adjust the volume, clockwise to increase the volume, and counterclockwise to decrease the volume.

Switching channels

The user can press the up and down keys to switch channels. The upper right corner of the LCD displays the alias of the current channel (CH:X), where X represents the channel number.

Zone Selection

A zone is a channel group, that is, you can include channels with the same attributes in one zone, so that you can effectively manage existing channels. The unit supports 100 zones, each zone containing up to 32 channels.

There are two ways to select a region:

1. Select through menu

After entering the "Area" menu, press the [Up] / [Down] key to select the desired area, and then press the [Enter] key to switch to the selected area.
2. Select by programming button

Press the programmed [Zone Up] or [Zone Down] button to switch to the desired area.

Remarks: You can enter the designated area and channel after booting through the dealer settings. If not specified, enter the area and channel where the last shutdown occurred.

Call and reception

In order to ensure the best receiving volume of the receiver's intercom, please keep the microphone about 2.5 to the mouth when launching 5 cm .

Call

You can initiate a call in the following ways.

- Make a call to a preset contact

In the standby interface, press and hold [PTT] to initiate a call to the preset caller on the current digital channel. Remarks: You can preset a contact for each digital channel, which can be a caller or a group call.
- Or call the contact all the time.

- Initiate a call through the Contact List or Call Log

- 1 Select "Contacts-> Contact List" or select "Call History" to enter the list of dialed / received / missed calls;
- 2 Use the [Up] / [Down] keys to select the caller you want to call;
- 3 Hold down [PTT] to initiate a call.

- Initiate a call by manual dialing
 - 1 Select "Contacts-> Manual Dialing" to enter the dialing interface.
 - 2 Enter the number of the call you want to call through the handheld microphone with keyboard;
 - 3 Hold down [PTT] to initiate a call.

- Receive and reply to a call

After receiving a call, press [PTT] for a preset time to send a callback. If the callback is not made , the missed call alert icon is displayed. To remind you.

Group call

Initiate group call

You can initiate a group call in the following ways.

- Make a call to a preset contact

In the standby interface, press and hold [PTT] to initiate a group call to the group call contact preset on the current digital channel.

- Initiate a call through the Contact List
 - 1 Select "Contact -> Contact List";
 - 2 Use the [Up] or [Down] keys to select the group call contact you want to call;